

Walls For Roll-Out Awnings

Campers ★ Annexes ★ Repairs

20 Howards Road Beverley SA 5009
P 08 8244 5622 F 08 8244 5711
E australcanvas@bigpond.com.au
W www.australcanvas.com.au

INSTALLATION AND OPERATING INSTRUCTIONS

1. Unpack the AFK from carton.
2. Select the two (2) sections which fit to the wall brackets on the caravan. These two (2) sections have the joiner piece fitted inside for transport /packing purposes.
3. Remove two (2) set screws, slide and joiner piece out, reverse the direction and re -fix in place using the original set screws.

STEP 1

- Erect Roll-out awning
- Ensure the roller is set at the predetermined height to suit the wall measurements before tightening roll-out awning arms.
- Ensure that the roller is set at the 9 o'clock position.
- This may have to be rotated manually.
- **See diagram 1 (below)**

This will allow water to run off the fabric. Step 2:

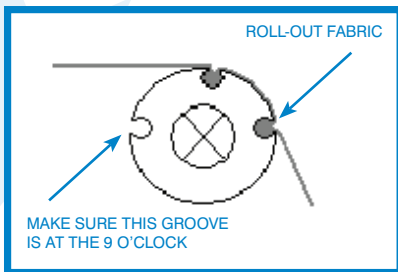


DIAGRAM 1

STEP 2

- If using the Anti Flap Kit (AFK) release the locking clamp handles. Ensure the top clamp section of AFK is open. Slide the 2 sections of the AFK together.
- Unzip the zip on the front/back wall (next to the rope edge caravan side).
- Slide top rope edge of one end wall into the rope track of the corresponding rail of the AFK.
- **See diagram 2 (below)**
- Hook the roof rail end (bent end) of the anti flap kit into the roof rail bracket on the caravan.
- With the top clamp of the AFK still open, telescope out and position spigot into hole in roller.
- Clamp the AFK to the fabric of the roll-out awning by closing the six handles, till fabric is taught.
- Feed the thin canvas strip down the rope track on the side of the caravan. Close the zip.
- Repeat again with other end wall.

- Slide the long side wall through the rope track in the roller of the roll-out awning. (groove at the 9 o'clock position)

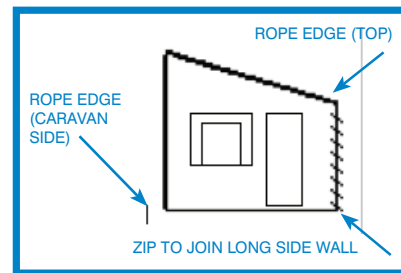


DIAGRAM 2

STEP 3

- Join walls together at the corners by zipping them together.
- Tighten webbing and side release buckles around legs of roll-out awning.
- **See diagram 3 (below)**

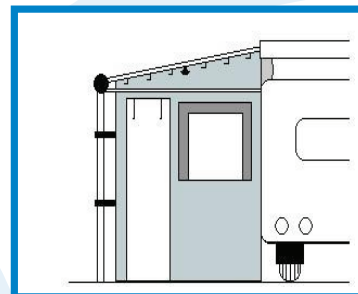


DIAGRAM 3

FOR STANDARD WALL INSTALLATION WITHOUT USING AN ANTI FLAP KIT

- Install long side wall as above.
- Slide adjustable roof rails through top pockets of the front and back wall
- Slide side rope edge through the rope track on the side of the caravan.
- See diagram 2
- Place the bent end of the roof rail into the roof rail bracket on the side of the caravan.
- Adjust roof rail out and position spigot into hole in roller.
- Open clamp lock buckles on top of each wall and slide the edge of the awning fabric into the buckle and lock down.
- Finish at Step 3

WARRANTY CLAIMS MUST BE RETURNED TO ALL THE FACTORY FOR ASSESSMENT OR WARRANTY BECOMES VOID (BROKEN ZIPS ARE NOT COVERED BY WARRANTY)